



EM7410
WiFi Music Streamer

en

Manual

EM7410 – WiFi Music Streamer

Table of contents

1.0 Introduction	2
1.1 Packing contents	2
2.0 Explanation of the connections	3
3.0 Connecting the WiFi Music Streamer.....	3
4.0 Connecting/Setup the EM7410 with your WiFi device.	4
4.1 Connecting to the EM7410	4
4.2 Connect the EM7410 to your LAN	4
5.0 APP support	6
5.1 iOS (iPhone/iPad).....	7
5.2 Android smartphone/tablet.....	7
5.3 PC/Notebook (Windows)	7
6.0 Frequently Asked Questions and other related information	8
7.0 Service and support.....	8
8.0 Warning and points of attention	8
9.0 Warranty conditions.....	9

1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by a five-year Eminent warranty. Please keep this manual and the receipt in a safe place.


Register your product now on www.eminent-online.com and receive product updates!

1.1 Packing contents

The following parts need to be present in the packing:

- EM7410 WiFi Music streamer
- Power supply
- Micro USB cable
- 3.5mm jack stereo - 2x Cinch male audio cable
- Quick Installation Guide


2.0 Explanation of the connections

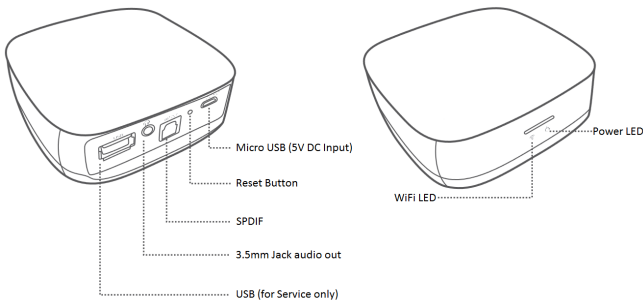

- **Micro USB:** Connection for the Micro USB power cable (5V).
- **Reset button:** You can reset the WiFi Music Streamer to the factory settings by pressing the “Reset button”. To do so, you could use a bent open paper clip.
- **SPDIF (optical) connection:** Audio connection to connect to your digital audio receiver.
- **3.5mm jack stereo:** Used to connect to a analogue headphone/speaker or audio receiver.
- **USB:** used for service only.
- **Power Led:** Indicates if the device is powered.
- **WiFi LED:** Indicates the WiFi status of the device.

3.0 Connecting the WiFi Music Streamer

1. Connect the power supply to a wall outlet.
2. Connect the Micro USB cable of the power supply to the 'Micro USB' of the EM7410.
3. Connect the EM7410 to an audio device with the 3.5mm jack / 2x Cinch or SPDIF optical cable. Preferably use the SPDIF optical cable (not included) for the best possible audio playback.

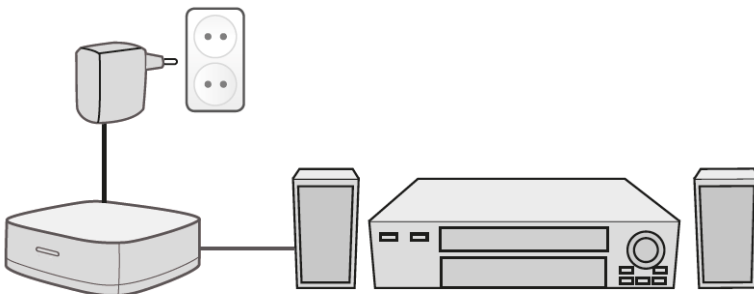


4.0 Connecting/Setup the EM7410 with your WiFi device.

Before you can start streaming you first need to connect your Smartphone/Tablet/PC/Notebook with the EM7410. To stream directly to the EM7410 you only need to follow chapter “Connecting to the EM7410”. If you wish to integrate the EM7410 in your local network please follow chapter “Connecting to the EM7410” and “Connect the EM7410 to your LAN”

4.1 Connecting to the EM7410

- Check if the Power LED of the EM7410 is lid.
- Connect your WiFi device to the WiFi network (SSID) of the EM7410 (The WiFi network name can be found on the bottom label of the EM7410 SSID: WiFi_Music_xxxx).

 
Now you are connected to the EM7410 you can start streaming your audio files. For explanation on how to stream to the EM7410 Please refer to chapter “APP support”

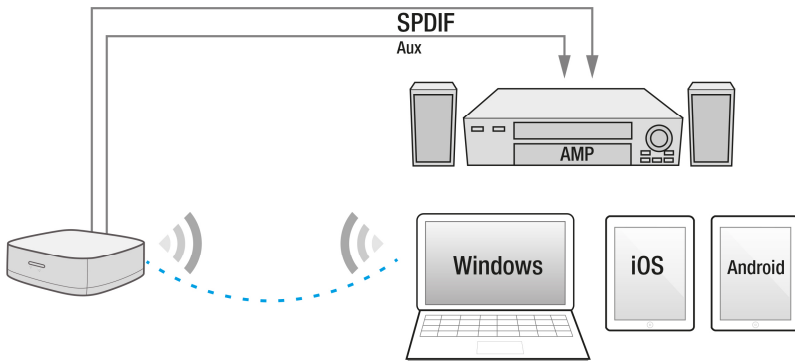

4.2 Connect the EM7410 to your LAN


You can connect your EM7410 to your LAN so you can access it from anywhere within your LAN.

- First make sure you are connected to the WiFi network (SSID) of the EM7410. (see chapter “Connecting to the EM7410”).
- Open your browser.
- Enter <http://10.1.1.1> in the address bar of your devices browser.
- The following setup menu appears

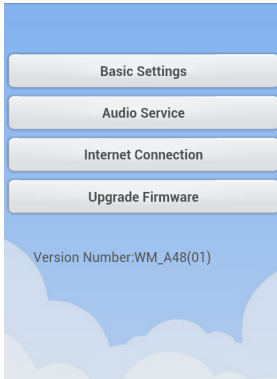

- Select **"Internet connection"**.
- Check if **"Wireless access"** is enabled, if not please enable.
- Select the WiFi network (SSID) of your Wireless network you wish to connect to.
- Enter the Encryption key of your network.
- Press **"OK"**.

The EM7410 will now reboot and connect to your LAN. You will now be able to access the WiFi Music Streamer from within your own LAN.

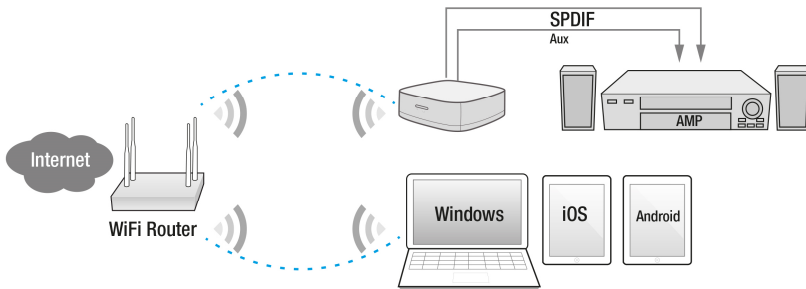


*Note: Within this Setup Menu you can also change the WiFi settings incl. encryption and the streamer name. To change the WiFi settings select **"Basic Settings"** from the menu. To change the streamer name select **"Audio Service"** from the menu.*

Note: When the EM7410 is connected to your WiFi Router/modem the EM7410 can be used as a wireless access point. By default the WiFi of the EM7410 is not secured and will provide a internet connection to every device connected to the EM7410 unsecured. We suggest t secure the WiFi network of the EM7410 if you decide to connect it to your WiFi network (see chapter WiFi configuration).

4.3 WiFi configuration

The WiFi connection of the EM7410 by default is unsecured. If you decide not to connect the EM7410 to your network this will have no security issues with your network. However when you decide to connect the EM7410 to your local network via WiFi (see chapter Connect the EM7410 to your LAN) we suggest to secure the WiFi network of the EM7410 with a password to prevent external users to connect to the internet/network using the EM7410.

- First make sure you are connected to the WiFi network (SSID) of the EM7410. (see chapter “Connecting to the EM7410”).
- Open your browser.
- Enter <http://10.1.1.1> in the address bar of your devices browser.
- The following setup menu appears

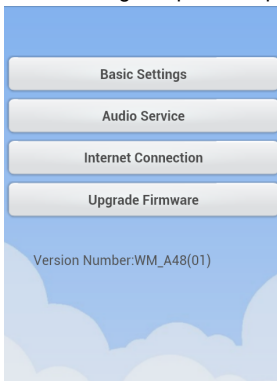


- Select “**Basic Settings**”.
- If desired change the name of the WiFi network of the EM7410 in the text field “**DeviceName**”.
- Select the type of encryption at the menu option “**Security**” We suggest to use the WPA/WPA2 encryption.
- Enter the Password you wish to use to secure your WiFi network of the EM7410 in the text field “**Password**”.
- Confirm the Password in the text field “**Confirm Password**”.
- Press “**Done**”.

5.0 APP support

To start streaming to the EM7410 please determine the correct chapter(s) below for explanation for your device(s).

5.1 iOS (iPhone/iPad)

Apple iOS devices can stream to the EM7410 without using an APP.

- Connect your iOS device to the Wi-Fi network of the EM7410. (see chapter “Connecting to the EM7410”).
- Swipe up from the bottom of your screen to access the iOS Control Center. (on older generations open “**Music**”).
- Tap  icon.
- Select “**WiFi_Music_Streamer**”.
- Now you can play your audio files from your iOS device and it will be streamed to the EM7410

5.2 Android smartphone/tablet

For Android devices you need to install an APP supporting DLNA for example:

- iMediashare
- BubbleUPnP
- ShareOn

Connect your Android device to the Wi-Fi network of the EM7410. (see chapter “Connecting to the EM7410”).

To start streaming to the WiFi Music streamer you need to select the audio device in the APP (WiFi_Music_Streamer).

5.3 PC/Notebook (Windows)

For Windows PC/Notebook you need to use Media software with DLNA support for example:

- Windows Media Player.

Connect your PC/Notebook to the Wi-Fi network of the EM7410. (see chapter “Connecting to the EM7410”).

6.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Eminent will update these pages frequently to assure you have the most recent information. Visit www.eminent-online.com for more information about your product.

7.0 Service and support

This user's manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.eminent-online.com/support.

You can also contact us by phone. Please check www.eminent-online.com/support for the helpdesk phone number and opening hours.

8.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations.

Always follow up the instructions in the manual*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

Repairing of the device should be done by qualified Eminent staff. The warranty immediately voids when products have undergone self repair and/or by misuse. For extended warranty conditions, please visit our website at www.eminent-online.com/warranty.

**Tip: Eminent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information.*

If you are experiencing any problems with the printed manual or you cannot find what you are looking for, please always check our website www.eminent-online.com first for the newest updated manual.

Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.

9.0 Warranty conditions

The five-year Eminent warranty applies to all Eminent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Eminent warranty applies to all Eminent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Eminent. Eminent may use refurbished materials for repair or replacement of your defective product. Eminent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Eminent networking product will keep working when settings are changed by the internet providers. Eminent cannot guarantee the working of web services, apps and other third party content that is available through Eminent products. Eminent products with an internal hard disk have a limited warranty period of two years on the hard disk. Eminent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronics Group